 


NONSTOP™

 
 
Station 

**Setup &
Usage Guide**

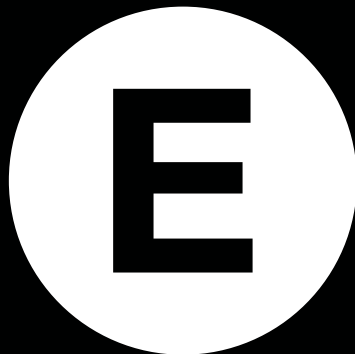

Interface & Display

- ① Alarm On/Off Slide
- ② Screen Brightness
- ③ Alarm Hour Set
- ④ Alarm Minute Set
- ⑤ Snooze
- ⑥ Alarm Indicator
- ⑦ Time Display
- ⑧ USB CHARGING PORTS (2.0A)

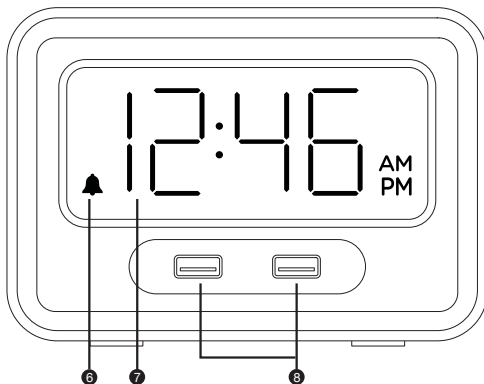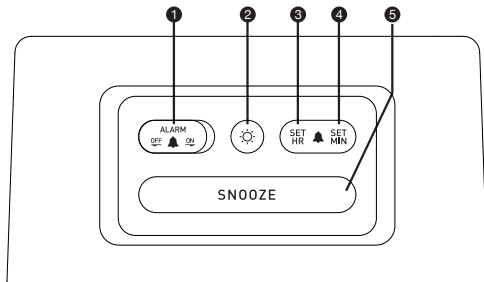

Specifications

Power	DC 5V 4.0A Adapter
USB Charging Ports.....	2X / 2.A
Alarm Duration.....	60 Minutes
Snooze Duration.....	9 Minutes

Installation

1. Plug the AC / DC (120 V AC) power cord into the power outlet on the AC wall. Your clock will turn on. It's ready to use now.
2. When the device is ON, the LED will blink. Press both "SNOOZE" and "DIMMER" together to set the current time.
3. If desired, place the safety clip on the cable and attach it to the furniture or wall.

USB Charging

The Station E features dual USB charging ports (2 X 2A) on the front of the unit which are designed to charge most USB compatible devices. Simply plug in a USB cable into the USB port then connect to your device to begin charging.

Setting the Date & Time

1. On the top of the clock, press both "SNOOZE" and "DIMMER" together to enter year setting mode, with the display will begin flashing "20 ", and then press the HR/MIN buttons to set the year .
2. Press SNOOZE (or DIMMER) button again to set the date. The display will begin flashing "1/1 ", press the HR to set the month and press MIN to set the day.
3. Press SNOOZE (or DIMMER) button confirm date set and enter time setting mode. Press the HR and MIN buttons to set the hours/minutes. (You can tap or hold down to change the time faster). As you cycle through, the hours will change from AM to PM.
4. Press SNOOZE (DIMMER) button again to confirm the month and enter to set the DST (auto day light savings time) mode.
5. Press the HR /MIN button to change DST"ON"/"OFF"

Press SNOOZE (DIMMER) button again to confirm DST,and then exit the set.

Note: the DST by default is ON.

Setting the Alarm

To set the time, simply press the HR button and MIN button to change the alarm time.

Slide the ALARM switch to the "ON" position. When the alarm is on, the alarm indicator icon will appear the display.

Using the Alarm

To snooze, tap the SNOOZE button. The Alarm will sounds again after 9 minutes. While the alarm is being snoozed, the Alarm indicator LED will flash .

To reset ALARM to sound again next day, press switch to the "ON" again.

Adjusting the Brightness

There are three (3) levels of display brightness. Repeatedly press the DIMMER button to select the desired setting.

SAFETY PRECAUTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. **SURGE PROTECTORS:** It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.
 - a. Do not expose this unit or the AC/DC adapter to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adapter.
 - b. To ensure that this unit is completely disconnected, unplug it from the wall.
 - c. Ensure that the AC/DC adapter is easily accessible.
 - d. Please note the information printed underneath the unit.
 - e. Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
 - f. Keep open flames, such as lighted candles, away from this unit.
 - g. Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.

FCC STATEMENTS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body

Supplier's Declaration of Conformity

Product Name: Station E

Model number: NSE

Responsible party:

Nonstop, Inc.

+1 775-398-3038

connect@nonstopproducts.com



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION: POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

NONSTOPTM

Nonstop Inc. All Rights Reserved.