

M- POWER-2T-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com



CUT HOLE IN WOOD

- 1 Rout/cut mounting hole in wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".



INSTALL OUTLET

- 2 Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N-cm ~ 0.6 N-cm**



M- POWER-2T-TRIM PLATE


ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

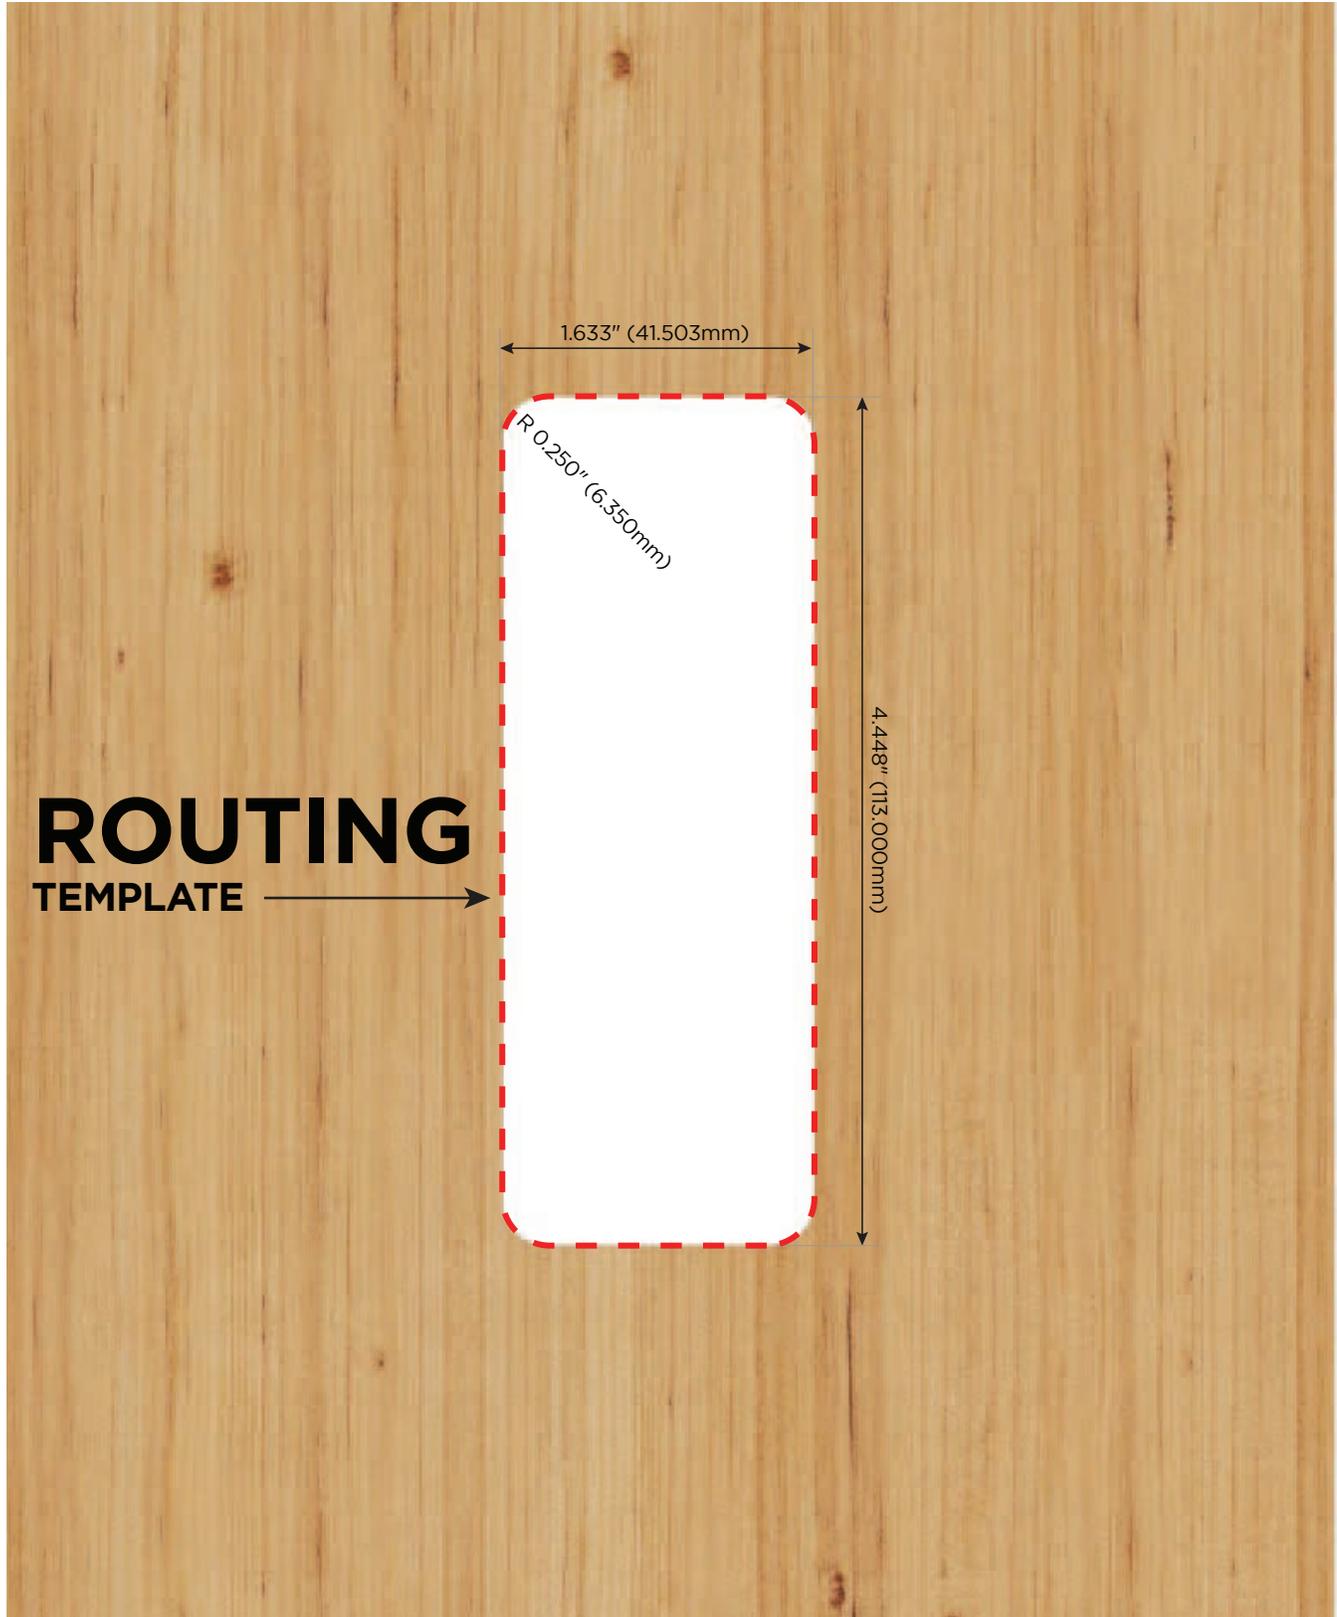



M- POWER-2T-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

