



# M-POWER-3T-RND (ROUND) BEZEL



# M-POWER-3T-RND (ROUND) BEZEL

## ROUND BEZEL INSTALL GUIDE



CUT HOLE IN TOP

1

Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

2

Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".



INSTALL OUTLET

3

Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.



SECURE SCREWS

4

Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.


**NOTE: Max Torque Force when tightening nuts is: 0.4 N·cm ~ 0.6 N·cm**

A Furniture Power Distribution Unit is not for permanent installation as part of the building structure and not for mounting in a permanently-installed furnishing such as a fixed countertop.





# M-POWER-3T-RND (ROUND) BEZEL

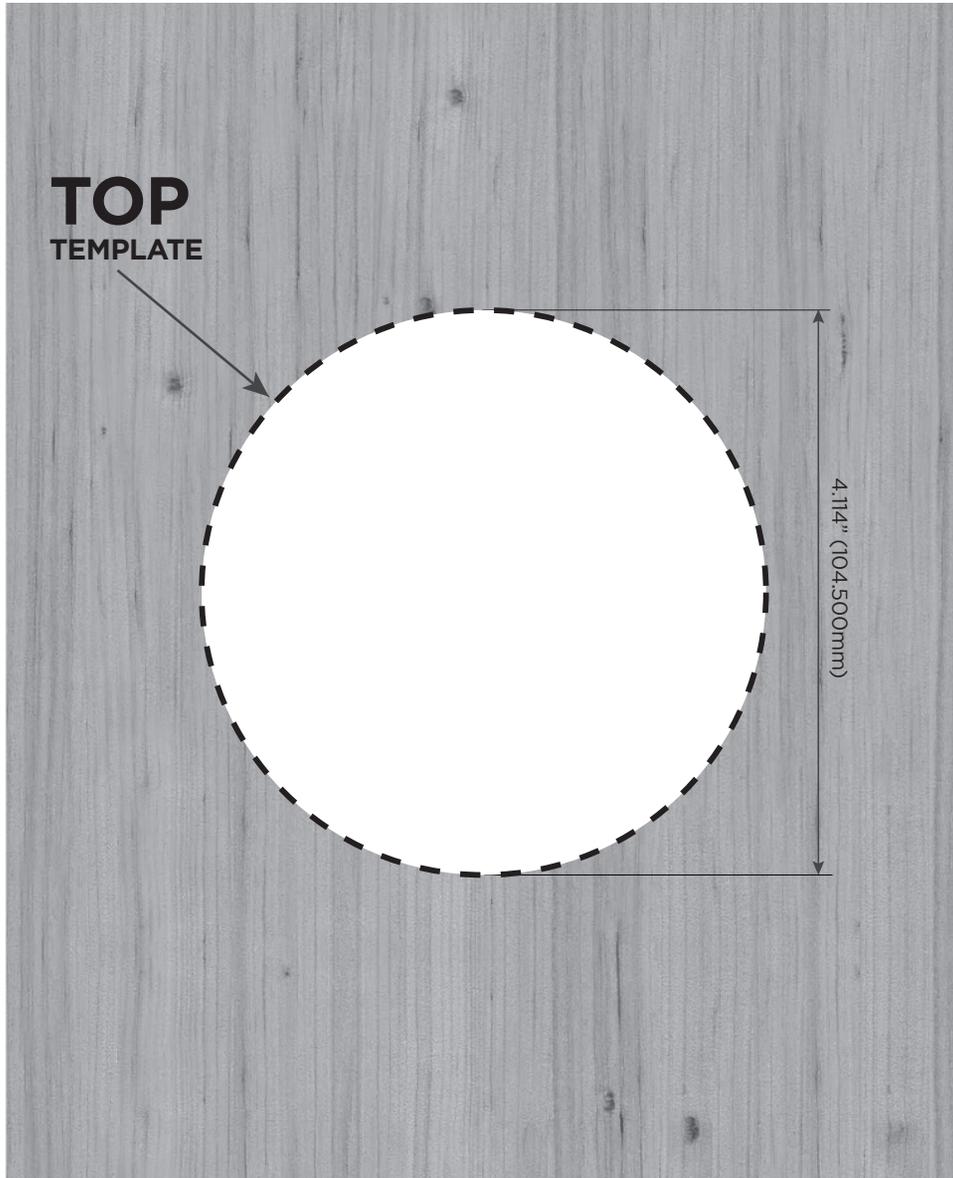

# M-POWER-3T-RND (ROUND) BEZEL

